

LFEV DYNAMOMETER SAFETY GUIDELINES

Emergency Contact :
(610) - 330 - 4444

Accopian Engineering Room 401 -
DYNO Room

Before any work verify the state of the Dynamometer by:



1. Checking for flashing lights and HIGH Voltage signs both outside and through the window of AEC 401.



2. Reading the voltmeter through the window of AEC 401.
De-Energized < 30V ≤ Energized



3. Verifying the state of the 250A power supply.
De-Energized = OFF
Energized = ON

